
25 dBi Wide Band Directional Parabolic Grid Antenna


PARTS INCLUDED

A 2x Grid Reflectors **B** 1x Feedhorn **C** 1x L-Bracket **D** 2x Toothed Saddles

E 2x U-Bolts **F** 4x Short Screws **G** 4x Long Screws

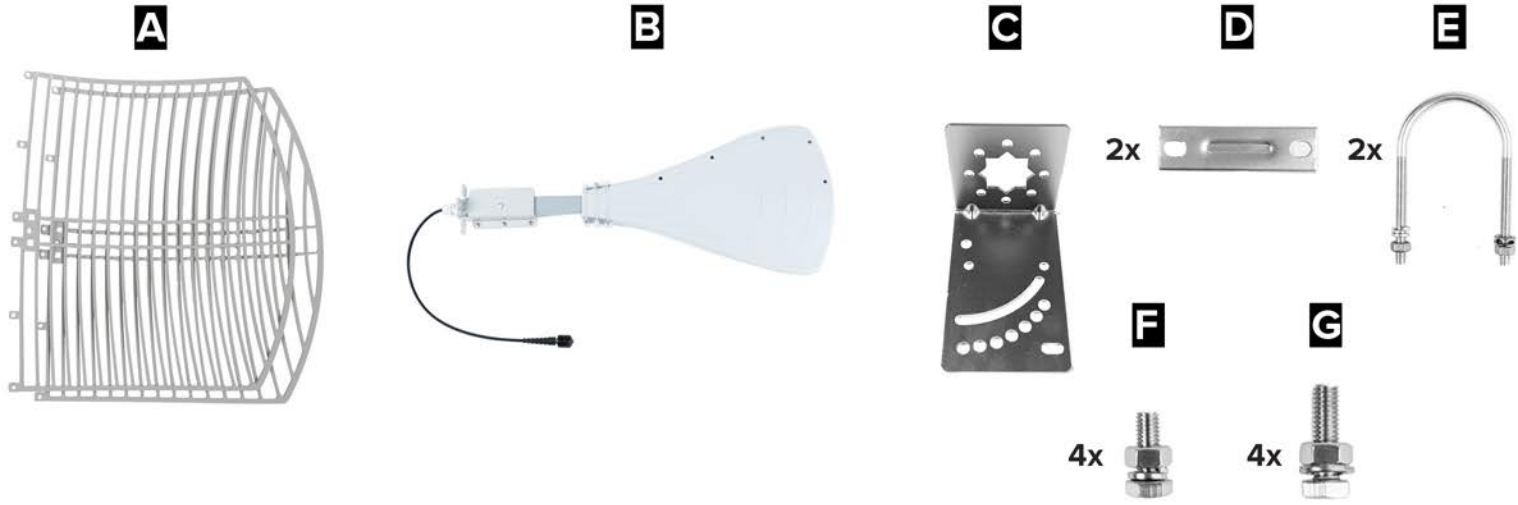

ASSEMBLY INSTRUCTIONS

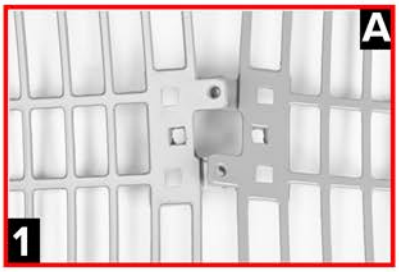

Bring the Grid Reflectors together and have the the tabs altnerate over/under



Secure the 4 outer tabs with short screws



Place the feedhorn in the middle and hold with long screws



Place the L- Bracket accordingly and tighten the screws



Using the U-bolts and Toothed saddles, secure the SurePower antenna onto the mounting pipe